

Renga Professional Installation and Activation Instruction




Before installing Renga Professional:


1. Check that your PC meets the minimum [System Requirements](#).
2. Download the RengaProfessional.zip distribution kit ([Download Renga Professional](#)).

To install Renga Professional on your PC:



3. Unzip the distribution kit from the RengaProfessional.zip archive.

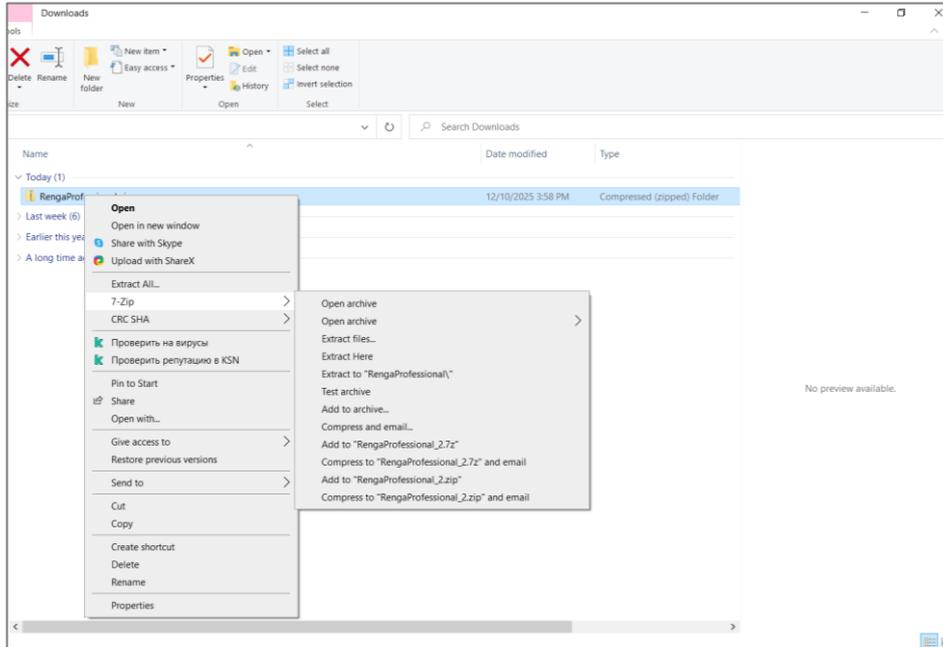


4. Run the RengaProfessionalSetup.exe installation file.

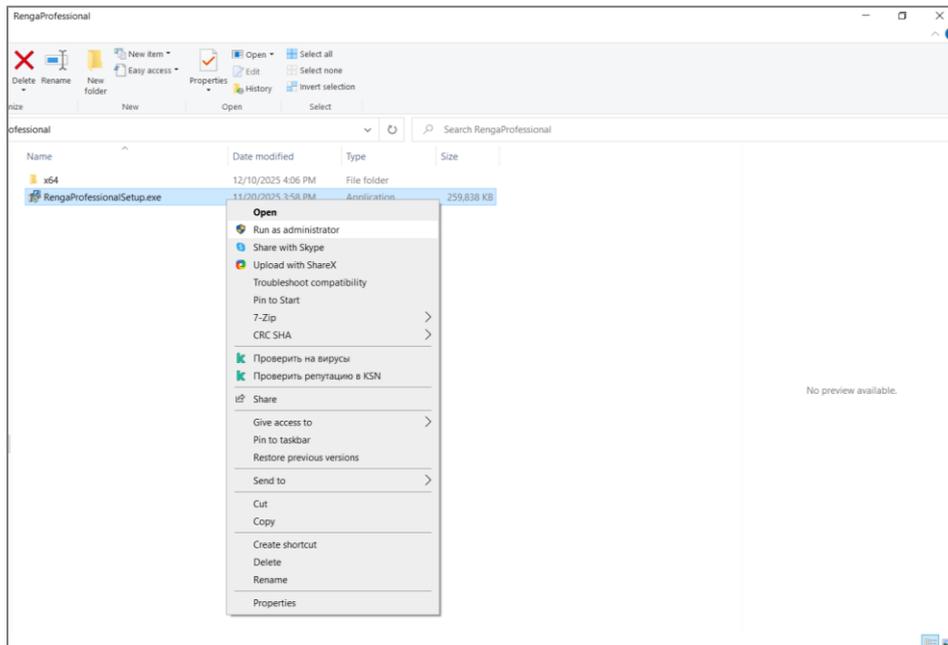

5. Follow the setup program instructions.

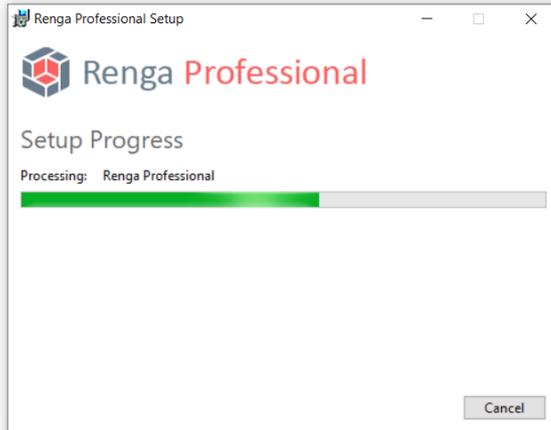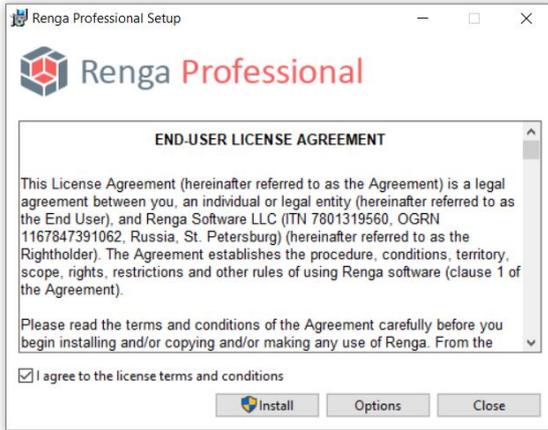

Renga Professional installation is complete!

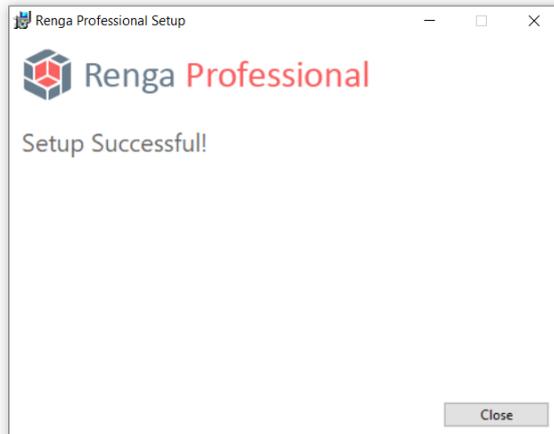

Renga Professional is ready for use!

Please note that Renga Professional has 30 days trial mode. After 30 days, Renga Professional switches to the reduced functionality mode where you can open and view projects, use the basic program tools, but cannot save changes, export, or print. To continue using all the features of Renga Professional you need a commercial license.

Renga Collaboration Server Installation Instruction




Before installing Renga Collaboration Server:


1. Download the RengaCollaborationServer.zip distribution kit ([Download Renga Professional](#)).

To install Renga Collaboration Server:

2. Unzip the distribution kit from the archive.

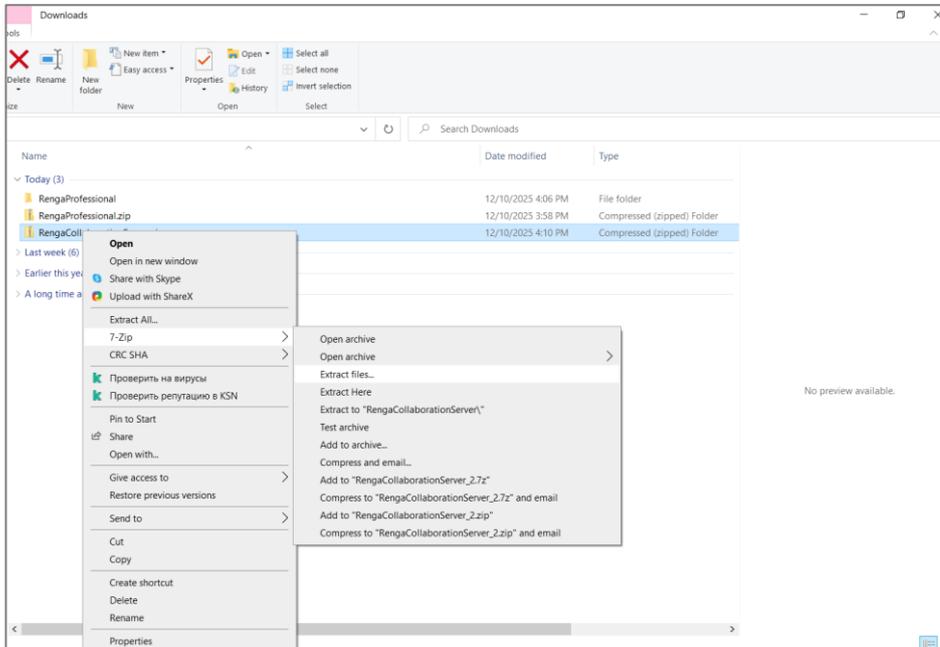


3. Run the installation file RengaCollaborationServerSetup.exe

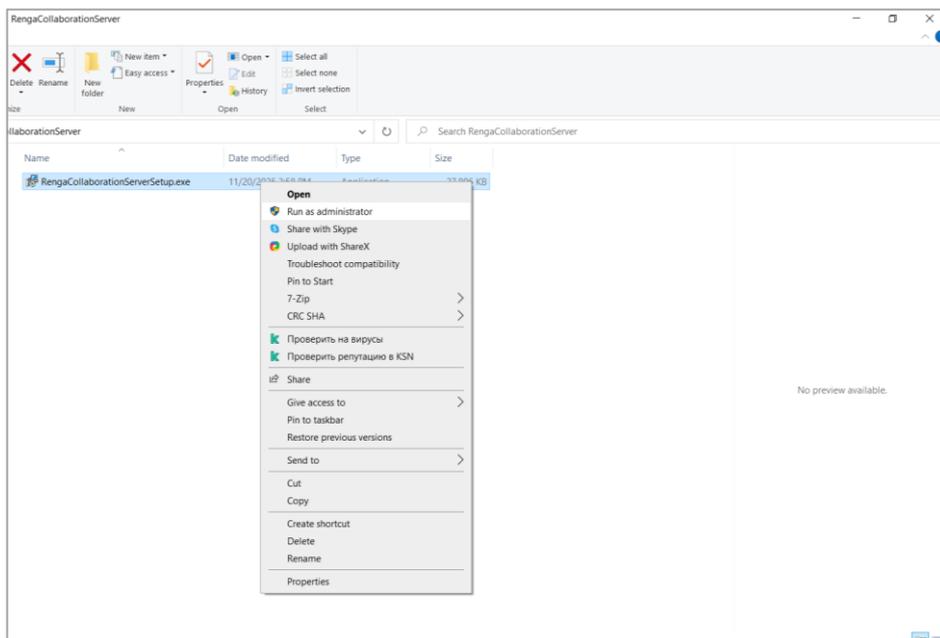


4. Follow the installer's instructions



Renga Collaboration Server installation is complete!

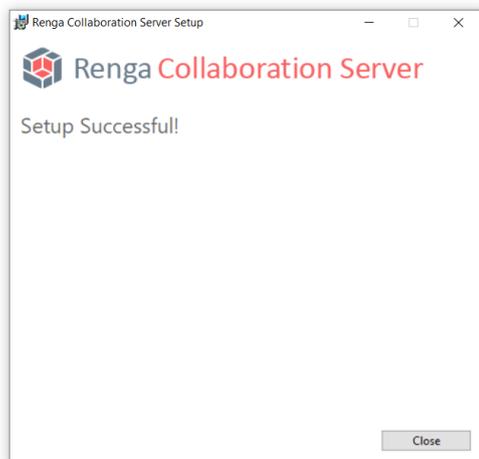

5. Verify in the Task Manager that Renga Collaboration Server service is running

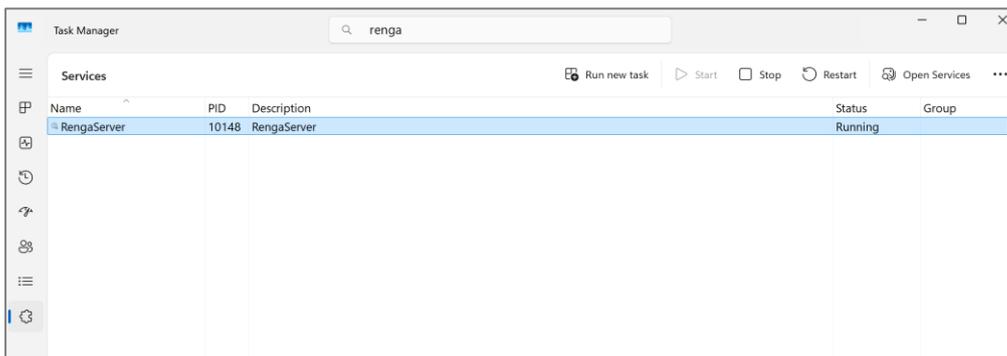

Renga Collaboration Server is ready for use!