

Renga Standard Installation and Activation Instruction




Before installing Renga Standard:


1. Check that your PC meets the minimum [System Requirements](#).
2. Download the RengaStandard.zip distribution kit ([Download Renga Standard](#)).

To install Renga Standard on your PC:


3. Unzip the distribution kit from the RengaStandard.zip archive.

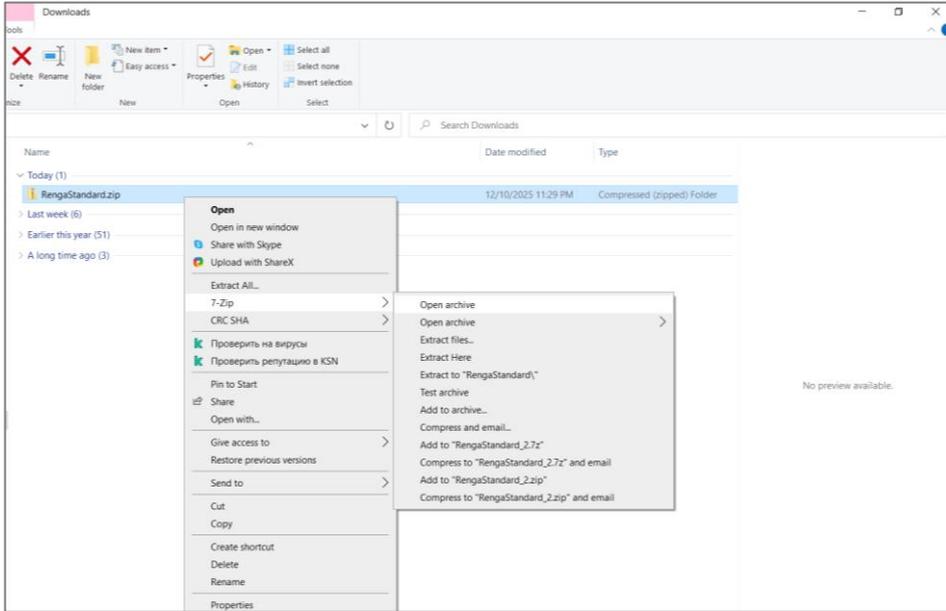


4. Run the RengaStandard.exe installation file.

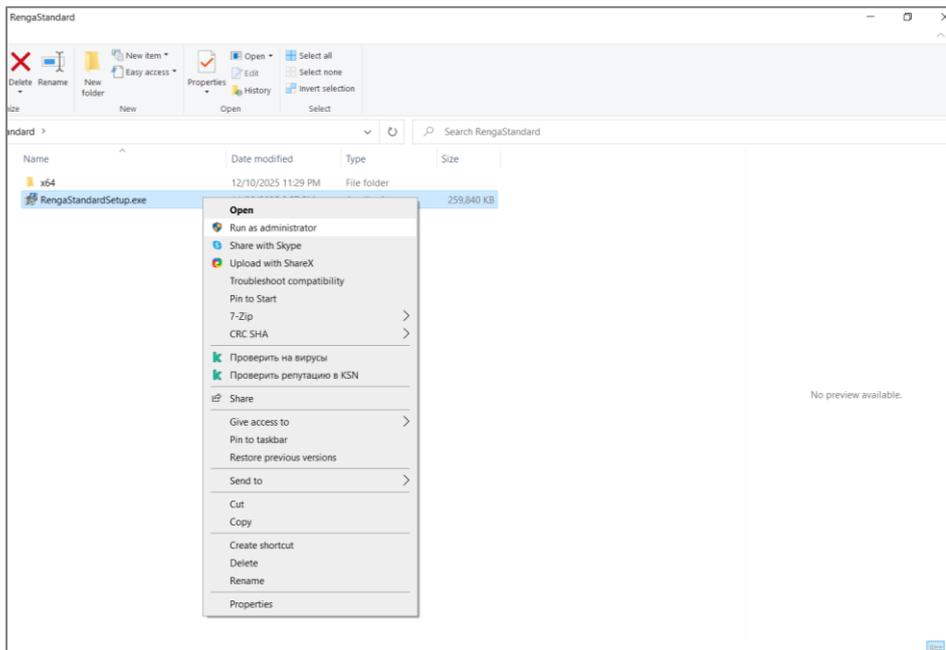

5. Follow the setup program instructions.

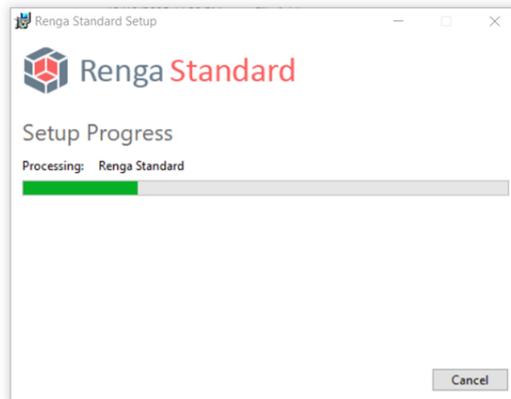

Renga Standard installation is complete!

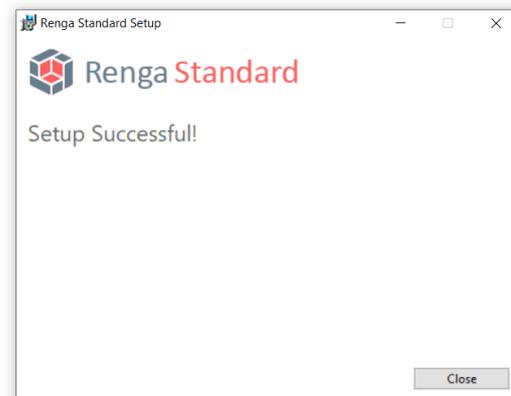

Renga Standard is ready for use!

Please note that Renga Standard has 30 days trial mode. After 30 days, Renga Standard switches to the reduced functionality mode in which you can open and view projects, use the basic program tools, but cannot save changes, export, or print. To continue using all the features of Renga Standard, you need a commercial license.